


## Routing Different Sources to Stryker Monitor

Justin Fedoryk - 2022-08-11 - AV/ Simulation IQ

Description: Steps on making sources in the Mock OR and Control Room for the Mock OR display on the Stryker Monitors.


1. **From the Home Screen of the Crestron Touch Panel in the Control Room: Select "EMR Inputs"**

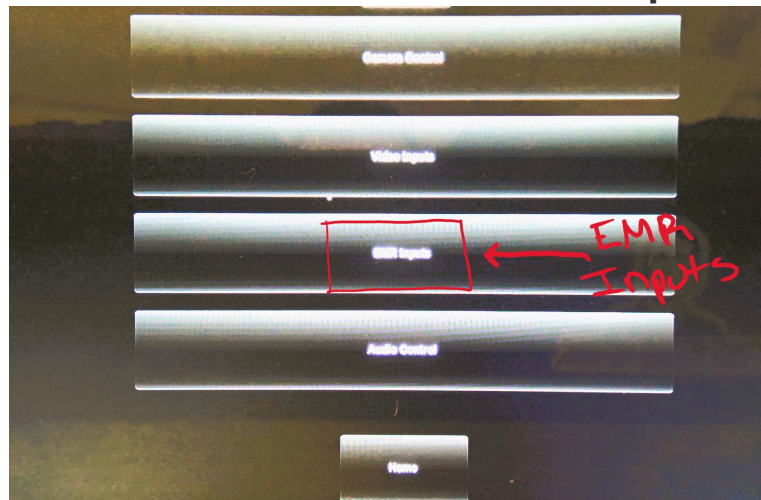


2. **There are two Stryker Routing Options ("Vitals", "EMR") -> Select the Source you would like to be displayed**

\*If you only need one source, you can ignore the "EMR Source" or just make both ("Vitals" and "EMR") the same.\*

\*If the screen is not at the home screen like in "Step: 1" you can select "EMR Inputs" at the bottom from any other screen to get here"

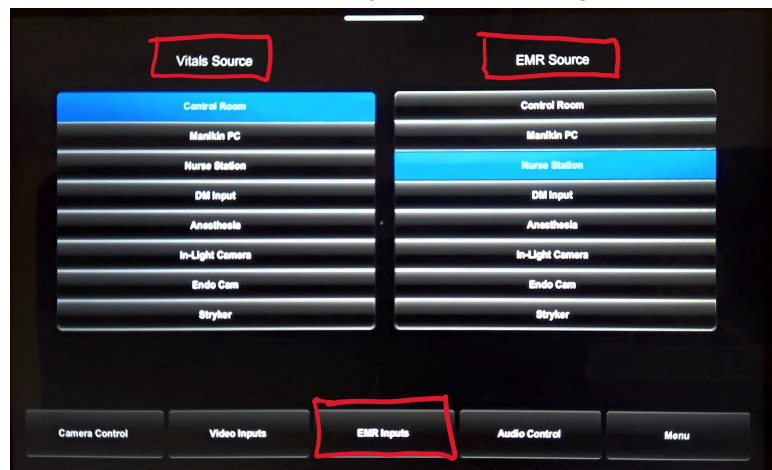


3. **From the Stryker Screen: Select the Source ("Vitals" or "EMR") you want to display**  
**(The Source should be highlighted after selecting)**

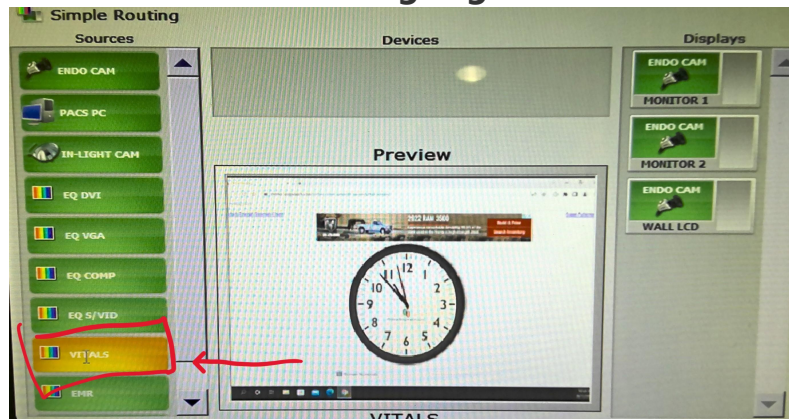

4. **Once your Source is selected, Select the monitor you would like to see it on.**  
**(The selected display will now be highlighted)**

\*You can select multiple monitors or "Vitals" on one and "EMR" on the second\*

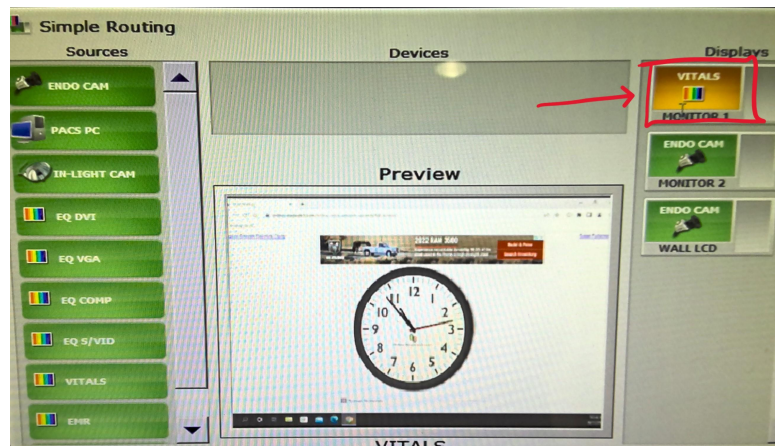

5. **The Source should now be displaying on the monitor(s) of choice**

\*Verify that the monitors are on and functioning\*